

PART NO.	ATA/CMM	MANUFACTURER	COMPONENT NAME
0331201960 INSPECT ONLY	49-26-31	AERONAMIC	GEAR RING, IGV
0332220960 INSPECT ONLY	APS3200 CIR	P&WC	SUPPORT, IGV ACTUATOR
10198 REPAIR ONLY	RS-101000	TAVIS	TRANSDUCER
10198-1 REPAIR ONLY	RS-101000	TAVIS	TRANSDUCER
10198-BSC REPAIR ONLY	RS-101000	TAVIS	TRANSDUCER
102-00000 INSPECT/TEST ONLY	31-00-02	NORWICH AERO	TEMPERATURE SENSOR
10-369510-1	03-5NA-44	NAVAIR	EXCITER
10-369510-2	03-5NA-44	NAVAIR	EXCITER
10-378400-3 868962-2	74-10-06	UNISON HONEYWELL	EXCITER
10-378400-5 868962-3	74-10-06	UNISON HONEYWELL	EXCITER
10-381175-10 3603281-8 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-2 378640 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-3 3603281-3 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-4 3603281-4 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-6 3603281-3 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-7 3603281-4 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381175-9 3603281-7 TEST ONLY	49-40-33	UNISON HONEYWELL	EXCITER
10-381200-7 10-381200-9 3603281-1	49-40-35	UNISON HONEYWELL	EXCITER
10-381550-1 3014365	74-10-42 PMP-JP00414-2	P&WC UNISON	EXCITER
10-381550-2 3035546	74-10-42 PMP-JP00414-2	P&WC UNISON	EXCITER
10-381550-22 3119450-01	74-10-42 PMP-JP00414-2	P&WC UNISON	EXCITER
10-381550-4 3035589	74-10-42 PMP-JP00414-2	P&WC UNISON	EXCITER
10-381550-5 3900106	74-10-42 PMP-JP00414-2	P&WC UNISON	EXCITER

10-381750-1 899580-1	49-40-37	UNISON HONEYWELL	EXCITER
10-381750-12 369256-1	49-40-37	UNISON HONEYWELL	EXCITER
10-381750-14 3603281-6	49-40-37	UNISON HONEYWELL	EXCITER
10-381750-2 369256	49-40-37	UNISON HONEYWELL	EXCITER
10-381750-6 10-381750-10 3603281-2	49-40-37	UNISON HONEYWELL	EXCITER
10-383225-1 1-300-363-03 TEST ONLY	L-1106	UNISON HONEYWELL	EXCITER
10-383847	49-40-37	UNISON	HOUSING
10-387125-2 969690-2	49-41-01	UNISON HONEYWELL	EXCITER
10-392000-1 3070378-1	74-10-38	UNISON HONEYWELL	EXCITER
10-392000-2 3070378-2	74-10-38	UNISON HONEYWELL	EXCITER
10-392119 TEST ONLY	74-10-38	UNISON	CAPACITOR AND DIODE ASSY
10-397183	49-40-37	UNISON	CHASSIS
10-516000-1 3888000-2 TEST ONLY	49-40-39	UNISON HONEYWELL	EXCITER
10-516000-3 3888000-3 TEST ONLY	49-40-39	UNISON HONEYWELL	EXCITER
10-614237 TEST ONLY	74-10-06	UNISON HONEYWELL	POWER TRANSFORMER
10-614500-1 780524	74-11-03	UNISON P&WC	EXCITER
10-614950-1 6899093 TEST ONLY	74-10-05	UNISON ROLLS-ROYCE	EXCITER
10-617075-5 3888058-3	49-41-09	UNISON HONEYWELL	EXCITER
10-617075-6 3888058-5	49-41-09	UNISON HONEYWELL	EXCITER
10-617980-1 9238M66P05 TEST ONLY	74-11-12 PMP-JP00155-5	UNISON GE/CFMI	EXCITER
10-621630-1 50T241	74-11-04	UNISON P&WC	EXCITER
10-631045-1 9238M66P07 TEST ONLY	74-11-12 PMP-JP00155-5	UNISON GE/CFMI	EXCITER
10-631045-2 9238M66P08	74-11-12 PMP-JP00155-5	UNISON GE/CFMI	EXCITER
10-631045-3 9238M66P11 TEST ONLY	74-11-12 PMP-JP00155-5	UNISON GE/CFMI	EXCITER

117500-29 INSPECT ONLY	49-53-67	HONEYWELL	DIAPHRAGM ASSY
14330-004C1	38-34-30	SAFRAN	VACUUM TOILET
14330-004C2	38-34-30	SAFRAN	VACUUM TOILET
14330-004C3	38-34-30	SAFRAN	VACUUM TOILET
14330-004C4	38-34-30	SAFRAN	VACUUM TOILET
14403-004	38-34-46	ZODIAC AEROSPACE	LEVEL SENSOR
158935-1	49-94-06	HONEYWELL	OIL TEMP CONTROL VALVE
158935-2	49-94-06	HONEYWELL	OIL TEMP CONTROL VALVE
158935-3	49-94-06	HONEYWELL	OIL TEMP CONTROL VALVE
160192-1 TEST ONLY	49-91-18	HONEYWELL	AIR TO OIL COOLER
160426-2 TEST ONLY	49-94-40	HONEYWELL	AIR TO OIL COOLER
160544-1 INSPECT/TEST ONLY	APS3200 CIR 49-42-09	P&WC	IGNITOR
160550-1	49-94-30	HONEYWELL	VALVE TEMPERATURE CONTROL
16204-001	38-33-02	MONOGRAM SYSTEMS	MOTOR-PUMP-FILTER ASSEMBLY
16204-002	38-33-02	MONOGRAM SYSTEMS	MOTOR-PUMP-FILTER ASSEMBLY
16204-003	38-33-02	MONOGRAM SYSTEMS	MOTOR-PUMP-FILTER ASSEMBLY
171816-100 TEST ONLY	49-70-02	P&WC	ENGINE SERIAL NUMBER IDENTIFICATION ASSY
1A081-0155-1	25-41-18	YOKOHAMA	FLUSH TIMER SWITCH
2000866-2 INSPECT/TEST ONLY	49-41-08	HONEYWELL	STARTER
2000866-3	49-41-08	HONEYWELL	STARTER
2000866-4	49-41-08	HONEYWELL	STARTER
232T4BT	49-25-95	HONEYWELL	VALVE
2684752 INSPECT ONLY	49-30-99	HONEYWELL	RESOLVER AND LEVER
2684816 INSPECT ONLY	49-30-99	HONEYWELL	VALVE
2684837-040 INSPECT/TEST ONLY	49-30-99	HONEYWELL	TEMPERATURE PROBE ASSY
2684983 INSPECT/TEST ONLY	49-30-99	HONEYWELL	SOLENOID VALVE
2685841 INSPECT ONLY	49-30-99	HONEYWELL	FUEL CONTROL HOUSING

2704458-1	49-41-14	HONEYWELL	ENGINE STARTER MOTOR
2718834 INSPECT/TEST ONLY	49-30-99	HONEYWELL	METERING VALVE
3032167 49930 TEST ONLY	74-10-01	P&WC UNISON	EXCITER
3038137 9047840-1 TEST ONLY	74-12-04	P&WC UNISON	EXCITER
3040032 9047840-2 TEST ONLY	74-12-04	P&WC UNISON	EXCITER
3041641-01 9049770-3	74-12-08	P&WC UNISON	EXCITER
304300-2 TEST ONLY	49-90-57 49-26-85	HONEYWELL	PRESSURE SWITCH
304634-2	49-26-11	HONEYWELL	IGNITOR PLUG
305766-1 CH31769 TEST/INSPECT ONLY	49-26-85	HONEYWELL CHAMPION	IGNITOR PLUG
305766-4 TEST/INSPECT ONLY	49-26-85	HONEYWELL	IGNITOR PLUG
3071949-10	79-20-03	HONEYWELL	LUBE/SCAV PUMP
3071949-X	79-20-03	HONEYWELL	LUBE PUMP ASSY
3103235-11	73-10-19	HONEYWELL	FUEL NOZZLE
3103235-9	73-10-19	HONEYWELL	FUEL NOZZLE
3-1285-200 TEST ONLY	49-93-61	HONEYWELL	LOW OIL LEVEL SWITCH
3163812-10	49-53-67	HONEYWELL	GUIDE VALVE
3169756-4 INSPECT ONLY	49-53-67	HONEYWELL	BODY VALVE ASSEMBLY
3169759-6 INSPECT ONLY	49-50-87	HONEYWELL	ACTUATOR
3169772-6 INSPECT ONLY	49-53-67	HONEYWELL	HOUSING ASSEMBLY
3173837-3	49-53-67	HONEYWELL	RETAINER ASSEMBLY
3174726-5	49-53-67	HONEYWELL	FILTER ASSEMBLY
319974-1-1	79-20-06	GARRETT	SOLENOID VALVE
319974-4-1	79-20-06	GARRETT	SOLENOID VALVE
3290476-5 OVERHAUL ONLY	49-50-95	HONEYWELL	SURGE VALVE
3290594-1	49-26-51	HONEYWELL	VARIABLE VALVE CHAMBER

3291214-2	49-52-29	HONEYWELL	APU BLEED AIR VALVE, 3.5"
3291238-2	49-52-31	HONEYWELL	SURGE VALVE
3291432-2	49-52-35	HONEYWELL	OUTLINE VALVE
3511-004	38-33-02	MONOGRAM SYSTEMS	MOTOR-PUMP-FILTER ASSEMBLY
3601193-ALL	49-30-38	HONEYWELL	FUEL ATOMIZER ASSEMBLY
3601520-5	49-31-13	HONEYWELL	PRIMARY FUEL ATOMIZER
3603357-3	49-26-53 IRM	HONEYWELL	STARTER MOTOR
3605812-ALL	49-40-01	HONEYWELL	ELECTRICAL ENGINE STARTER
3612120-1 INSPECT ONLY	49-23-49	HONEYWELL	CLUTCH ADAPTER ASSY
3612844-1 3612844-2 DISASSEMBLE ONLY	49-23-49	HONEYWELL	STARTER CLUTCH ASSEMBLY
3613703-1 INSPECT ONLY	49-23-49	HONEYWELL	ROLLER BEARING
3614295-3	49-50-04	HONEYWELL	BUTTERFLY VALVE
3614408-1 INSPECT ONLY	49-51-93	HONEYWELL	FLOW SENSOR ASSEMBLY
3614409-1 INSPECT ONLY	49-51-93	HONEYWELL	HOUSING ASSEMBLY
3614416-1 3614416-2 DISASSEMBLE ONLY	49-51-71	HONEYWELL	FAN ASSEMBLY
3615036-1	49-23-49	HONEYWELL	AIRFLOW SENSOR
3615139-1 INSPECT ONLY	49-23-49	HONEYWELL	INLET SCREEN ASSEMBLY
3615772-2 INSPECT ONLY	49-25-95	HONEYWELL	CONTAINMENT RING
3616959-6 DISASSEMBLE ONLY	49-52-37	HONEYWELL	FAN ASSEMBLY
3616959-7	49-52-37	HONEYWELL	COOLING FAN ASSEMBLY
3616960-3	49-52-41	HONEYWELL	COOLING FAN ASSEMBLY
3616961-2 INSPECT ONLY	49-52-41	HONEYWELL	INLET FAN ASSEMBLY
3616965-1 INSPECT ONLY	49-52-41	HONEYWELL	CONTAINMENT SUPPORT
3616967-1 INSPECT ONLY	49-52-41	HONEYWELL	FAN ROTOR

3616969-2 INSPECT ONLY	49-52-41	HONEYWELL	SEAL RETAINER
3616977-3 INSPECT ONLY	49-52-37	HONEYWELL	ROTOR FAM ASSEMBLY
3617712-1 INSPECT ONLY	49-23-49	HONEYWELL	BEARING RETAINER
3617760-1 INSPECT ONLY	49-26-09	HONEYWELL	BLANKET SET
369259-47 TEST ONLY	49-41-05	HONEYWELL	IGNITION LEAD
372697-10	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-13	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-15	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-16	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-18-1	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-21-1	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-22	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-24	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-6	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
372697-9	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
373048	49-90-01	ALLIED SIGNAL	PRESSURE RELIEF VALVE ASSY
373048-1	49-90-01	ALLIED SIGNAL	PRESSURE RELIEF VALVE ASSY
373048-2	49-90-01	ALLIED SIGNAL	PRESSURE RELIEF VALVE ASSY
373048-3	49-90-01	ALLIED SIGNAL	PRESSURE RELIEF VALVE ASSY
375322-10	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
375322-7	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
375322-8	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
375322-9	49-40-01	ALLIED SIGNAL	ELECTRICAL ENGINE STARTER
379580-200	49-90-33	AERO CONTROLEX	OIL PUMP
379580-300	49-90-33	AERO CONTROLEX	OIL PUMP
379580-650	49-90-33	AERO CONTROLEX	OIL PUMP

379580-700	49-90-33	AERO CONTROLEX	OIL PUMP
3805051-1 INSPECT ONLY	49-26-85	HONEYWELL	GEARBOX ASSY
3810196-1 INSPECT ONLY	49-23-49	HONEYWELL	OIL COOLER FAN INLET SCREEN
3810209-2 INSPECT ONLY	49-23-49	HONEYWELL	POWER SECTION INSERT
3810448-2 INSPECT ONLY	49-25-95	HONEYWELL	INLET SCREEN ASSEMBLY
3810821-5 INSPECT ONLY	49-26-85	HONEYWELL	IGV ASSEMBLY
3822068-1 INSPECT ONLY	49-23-49	HONEYWELL	SECOND-STAGE COMPRESSOR ROTOR
3822504-2 INSPECT ONLY	49-26-85	HONEYWELL	SHAFT
3822635-2 INSPECT ONLY	49-26-85	HONEYWELL	ROTOR SEAL HYDRODYNAMIC
3824007-1 INSPECT ONLY	49-25-95	HONEYWELL	ENGINE COMPRESSOR INLET BEARING HOUSING ASSEMBLY
3826110-2 INSPECT ONLY	49-23-49	HONEYWELL	DESWIRL ASSEMBLY
3826251-2 INSPECT ONLY	49-23-49	HONEYWELL	IGVA MOUNT BRACKET COVER
3826755-7 INSPECT ONLY	49-25-95	HONEYWELL	COMPRESSOR HOUSING ASSEMBLY
3826756-3 INSPECT ONLY	49-25-95	HONEYWELL	COMPRESSOR HOUSING ASSEMBLY
3826826-1 3826826-2 3826826-3 INSPECT ONLY	49-25-95	HONEYWELL	DESWIRL ASSEMBLY
3827324-3	49-26-85	HONEYWELL	SUPPORT STATIOARY SEAL AIR
3827325-3 INSPECT ONLY	49-26-85	HONEYWELL	DIFFUSER ENGINE COMPRESSOR
3827402-3	49-26-85	HONEYWELL	HOUSING DIFFUSER
3830070-1	49-31-13	HONEYWELL	SECONDARY FUEL ATOMIZER
3830386-3 3830386-6	49-25-95	HONEYWELL	COMBUSTION CHAMBER
3830416-1	49-30-01	HONEYWELL	FUEL NOZZLE
3830418-1 INSPECT ONLY	49-26-85	HONEYWELL	FUEL NOZZLE AIR SHROUD
3840022-4 INSPECT ONLY	49-23-49	HONEYWELL	THIRD-STAGE TURBINE WHEEL
3840111-7 INSPECT ONLY	49-25-95	HONEYWELL	THIRD-STAGE TURBINE WHEEL
3840294-1 INSPECT ONLY	49-25-95	HONEYWELL	SHAFT QUILL

3840310-3 INSPECT ONLY	49-26-85	HONEYWELL	FIRST STAGE TURBINE ROTOR ASSY
3844009-1 INSPECT ONLY	49-23-49	HONEYWELL	SECOND-STAGE STATOR SUPPORT
3844018-1 INSPECT ONLY	49-23-49	HONEYWELL	THIRD-STAGE STATOR ASSEMBLY
3844028-4 INSPECT ONLY	49-23-49	HONEYWELL	TURBINE BEARING SUPPORT ASSEMBLY
3844050-2 INSPECT ONLY	49-23-49	HONEYWELL	LABYRINTH SEAL
3844408-2 INSPECT ONLY	49-25-95	HONEYWELL	FIRST-STAGE SHROUD SUPPORT
3844409-2 INSPECT ONLY	49-25-95	HONEYWELL	HOUSING-PISTON RING
3844411-1 INSPECT ONLY	49-25-95	HONEYWELL	ROTOR SEAL CURVIC COUPLING
3844433-2 INSPECT ONLY	49-25-95	HONEYWELL	THIRD STAGE TURBINE NOZZLE
3844821-1 INSPECT ONLY	49-25-95	HONEYWELL	STATIONARY AIR SEAL
3844864-1 INSPECT ONLY	49-26-85	HONEYWELL	STATOR
3844904-1 INSPECT ONLY	49-25-95	HONEYWELL	BAFFLE
3844922-1 INSPECT ONLY	49-26-85	HONEYWELL	HOUSING ASSY TURBINE BEARING
3862552-1 INSPECT ONLY	49-23-49	HONEYWELL	TRANSFER TUBE
3862775-3	49-51-81	HONEYWELL	FAN ASSEMBLY
3868000-4 INSPECT ONLY	49-25-95	HONEYWELL	SHAFT QUILL
3876023-2 TEST ONLY	49-23-49	HONEYWELL	TEMP SWITCH
3876024-6 TEST ONLY	49-23-49	HONEYWELL	LOW OIL PRESSURE SWITCH
3876027-4 TEST ONLY	49-23-49	HONEYWELL	THERMOCOUPLING
3876049-4	49-31-02	HONEYWELL	FUEL SOLENOID VALVE
3876049-5	49-31-02	HONEYWELL	FUEL SOLENOID VALVE
3876059-2 TEST ONLY	49-23-49	HONEYWELL	OIL LEVEL SWITCH
3876086-2	49-23-49	HONEYWELL	FLOW SENSOR ASSEMBLY
3876096-1 INSPECT ONLY	49-23-49	HONEYWELL	STATIC FLOW SENSOR ASSEMBLY
3876127-1 TEST ONLY	49-25-95	HONEYWELL	SENSOR
3876132-X	49-41-19	CHAMPION HONEYWELL	IGNITER LEAD ASSEMBLY

3876133-1 TEST ONLY	49-26-51	HONEYWELL	PRESSURE SENSOR
3876134-1 TEST ONLY	49-25-95	HONEYWELL	SENSOR
3876135-2 TEST ONLY	49-23-49	HONEYWELL	SENSOR DELTA
3876144-1 TEST ONLY	49-23-49	HONEYWELL	SENSOR TEMP OIL
3876145-2 TEST ONLY	49-25-95	HONEYWELL	HEATER
3876166-1	49-91-47	ALLIED SIGNAL	DE-OILING SOLENOID VALVE
3876185-2 TEST ONLY	49-31-25	HONEYWELL	VALVE SOLENOID
3876186-4	49-25-95	HONEYWELL	LOW OIL PRESSURE SWITCH
3876188-2	49-25-95	HONEYWELL	SWITCH
3876189-2 TEST ONLY	49-25-95	HONEYWELL	ELECTRONIC CHIP DETECTOR
3876191-1	49-25-95	HONEYWELL	TEMP LOAD COMPRESSOR
3876197-1 TEST ONLY	49-25-95	HONEYWELL	MOTIONAL TRANSDUCER
3876203-1 TEST ONLY	49-25-95	HONEYWELL	OIL TEMPERATURE SENSOR
3876219-2 TEST ONLY	49-52-15	KULITE	PRESSURE TRANSDUCER
3876223-1 TEST ONLY	49-26-85	HONEYWELL	SPEED SENSOR
3876225-2 TEST ONLY	49-26-85	HONEYWELL	INLET PRESSURE SENSOR
3876226-1 TEST ONLY	49-26-85	HONEYWELL	TOTAL PRESSURE SENSOR
3876227-2 TEST ONLY	49-26-85	HONEYWELL	DIFFERENTIAL PRESSURE SENSOR
3876255-2 TEST ONLY	49-26-85	HONEYWELL	LOW OIL PRESSURE SWITCH
3876271-1 TEST ONLY	49-26-85	HONEYWELL	THERMOCOUPLE EXHAUST GAS TEMP
3876330-2 TEST ONLY	49-93-61	HONEYWELL	LOW OIL LEVEL SWITCH
3876379-1 TEST ONLY	49-93-01	HONEYWELL	LOW OIL QUANTITY SWITCH
3879005-1	49-26-85	HONEYWELL	CHECK VALVE
3880124-1 INSPECT ONLY	49-23-49	HONEYWELL	VENT FITTING
3880125-1 INSPECT ONLY	49-23-49	HONEYWELL	OIL TRANSFER TUBE
3880130-6	49-91-53	AERO CONTROLEX	LUBE PUMP ASSY

3880135-7 INSPECT ONLY	49-91-41	AERO CONTROLEX	HOUSING OIL PUMP
3880140-1	49-91-43	AERO CONTROLEX	FLUID PRESSURE REGULATING VALVE ASSEMBLY
3880140-2	49-91-43	AERO CONTROLEX	FLUID PRESSURE REGULATING VALVE ASSEMBLY
3880140-3	49-91-43	AERO CONTROLEX	FLUID PRESSURE REGULATING VALVE ASSEMBLY
3880140-4	49-91-43	AERO CONTROLEX	FLUID PRESSURE REGULATING VALVE ASSEMBLY
3880160-3	49-23-49	HONEYWELL	SCAVENGE PUMP
3880164-2 INSPECT ONLY	49-23-49	HONEYWELL	SPECIAL FITTING
3880190-10	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-11	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-13	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-3	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-4	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-5	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-7	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-8	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880190-9	49-91-41	AERO CONTROLEX	LUBE PUMP ASSY
3880193-1 INSPECT ONLY	49-91-41	AERO CONTROLEX	PLUG
3880200-6	49-27-15	ALLIED SIGNAL	SCAVENGE PUMP
3880271-1 INSPECT ONLY	49-91-41	AERO CONTROLEX	INDICATOR-DIFFERENTIAL PRESSURE
3880292-1 INSPECT ONLY	49-23-49	HONEYWELL	PRESSURE FITTING
3880305-2 INSPECT ONLY	49-23-49	HONEYWELL	VENT TUBE
3880326-10 INSPECT ONLY	49-27-15	HONEYWELL	GEAR SPUR ASSY
3880326-11 INSPECT ONLY	49-27-15	ALLIED SIGNAL	GEAR SHAFT
3880326-13 INSPECT ONLY	49-91-41	AERO CONTROLEX	GEAR SHAFT ASSY
3880614-14 INSPECT ONLY	49-91-41	AERO CONTROLEX	GEAR SPUR
3880614-17 INSPECT ONLY	49-91-41	AERO CONTROLEX	GEAR SPUR

3880927-1 INSPECT ONLY	49-91-41	HONEYWELL	CONTAINER
3880940-1 INSPECT ONLY	49-91-41	AERO CONTROLEX	GEAR SHAFT
3880942-1 INSPECT ONLY	49-91-41	AERO CONTROLEX	HOUSING
3880942-2 INSPECT ONLY	49-91-41	HONEYWELL	HOUSING SET
3880956-3 INSPECT ONLY	49-25-95	HONEYWELL	OIL IN TUBE
3880957-2 INSPECT ONLY	49-25-95	HONEYWELL	OIL OUT TUBE
3880958-1 INSPECT ONLY	49-25-95	HONEYWELL	OIL INLET SHIELD
3880959-1 INSPECT ONLY	49-25-95	HONEYWELL	OIL OUT SHIELD
3880981-1 INSPECT ONLY	49-91-41	AERO CONTROLEX	LUBE PUMP DRIVE SHAFT
3880993-1 TEST ONLY	49-91-49	HONEYWELL	PRESSURE RELIEF VALVE
3881000-2 3881000-4 3881000-5 3881000-6 3881000-7	49-91-49	AERO CONTROLEX	OIL PUMP ASSEMBLY
3881007-1 3881007-2 3881007-3 INSPECT ONLY	49-91-49	AERO CONTROLEX	ROTOR SET
3881008-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881009-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881010-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881011-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881012-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881013-2 INSPECT ONLY	49-91-49	AERO CONTROLEX	PLATE PORT
3881017-1 INSPECT ONLY	49-91-49	HONEYWELL	FILTER HOUSING
3881018-1 INSPECT ONLY	49-91-49	HONEYWELL	RETAINER VALVE
3881051-1 INSPECT ONLY	49-23-49	HONEYWELL	OIL TRANSFER TUBE
3881052-1 TEST ONLY	49-91-49	AERO CONTROLEX	DIFFERENTIAL PRESSURE INDICATOR
3881059-1 INSPECT ONLY	49-91-49	HONEYWELL	TRANSFER TUBE
3881060-1 INSPECT ONLY	49-91-49	HONEYWELL	TRANSFER TUBE

3881061-1 INSPECT ONLY	49-91-49	AERO CONTROLEX	RETAINER TUBE
3881249-1 INSPECT ONLY	49-25-95	HONEYWELL	RING SEAL
3881691-1	49-91-49	AERO CONTROLEX	PUMP BYPASS VALVE
3881788-1	49-26-85	HONEYWELL	SHIELD-OIL COOLER
3882490-3 INSPECT ONLY	49-31-61	HONEYWELL	CARRIER ASSEMBLY SEAL
3882500-X	49-31-61	HONEYWELL	FUEL CONTROL ASSY
3882505-2 INSPECT ONLY	49-31-61	HONEYWELL	FUEL HOUSING ASSEMBLY
3882506-5 3882506-6 TEST ONLY	49-31-61	HONEYWELL	TORQUE MOTOR
3882511-1 INSPECT ONLY	49-31-61	HONEYWELL	FUEL TRANSFER ADAPTER
3882516-2 INSPECT ONLY	49-91-41	AERO CONTROLEX	COUPLING
3882545-1 INSPECT ONLY	49-31-61	HONEYWELL	RETAINER
3882547-3 INSPECT ONLY	49-31-61	AERO CONTROLEX	VALVE, MATCHED SET
3882550-3	49-31-63	HONEYWELL	FLOW DIVIDER
3882639-1 3882639-2 3882639-3	49-31-59	ALLIED SIGNAL	FUEL CHECK VALVE
3882639-4 3882639-5 TEST ONLY	49-31-59	ALLIED SIGNAL	FUEL CHECK VALVE
3882698-1 INSPECT ONLY	49-31-61	HONEYWELL	SPUR DRIVEN GEAR SHAFT
3883240-X	49-31-65	HONEYWELL	FUEL CONTROL ASSEMBLY
3883255-3 TEST ONLY	49-31-65	HONEYWELL	TORQUE MOTOR
3883255-4 TEST ONLY	49-31-65	HONEYWELL	TORQUE MOTOR
3883297-7	49-31-67	HONEYWELL	FUEL FLOW DIVIDER
3883499-1 3883499-2 3883499-3 B55690-2 B55690-3 B55690-004 B55690-005	49-50-05	HONEYWELL HONEYWELL HONEYWELL MOOG MOOG MOOG MOOG	SERVOACTUATOR
3883839-1 3883839-2	49-32-13	HONEYWELL	FUEL NOZZLE
3884211-1 INSPECT ONLY	49-23-49	HONEYWELL	SURGE ELBOW DUCT

3884238-3 INSPECT ONLY	49-23-49	HONEYWELL	TEE DUCT
3884391-1 INSPECT ONLY	49-23-49	HONEYWELL	SURGE AIR DUCT
3884647-1 TEST ONLY	49-25-95	HONEYWELL	LOAD COMPRESSOR ASSY
3884654-6 INSPECT ONLY	49-25-95	HONEYWELL	TEE DUCT
3884703-6 INSPECT ONLY	49-52-37	HONEYWELL	RETAINER SEAL
3884725-1 INSPECT ONLY	49-26-51	HONEYWELL	FAN INLET DUCT
3884971-1 TEST ONLY	49-26-85	HONEYWELL	TOTAL PRESSURE PROBE ASSY
3886167-2	49-50-03	HONEYWELL	SERVO ACTUATOR ASSY
3886167-3	49-50-03	HONEYWELL	SERVO ACTUATOR ASSY
3886167-4	49-50-03	HONEYWELL	SERVO ACTUATOR ASSY
3886169-1 3886169-2	49-50-04	HONEYWELL	SERVO ACTUATOR ASSEMBLY
3886188-1 3886188-2 3886188-3 TEST ONLY	49-50-07	HONEYWELL MOOG	IGV ACTUATOR
3888053-1 INSPECT ONLY	49-23-49	HONEYWELL	IGNITOR ADAPTOR
3888058-7	49-41-01	HONEYWELL	EXCITER
3888076-3 TEST ONLY	49-41-05	HONEYWELL	IGNITOR PLUG LEAD
3888217-4	49-41-10	HONEYWELL	ENGINE STARTER MOTOR
3888297-1	49-25-95	HONEYWELL	WIRING HARNESS ASSY
3888297-2	49-25-95	HONEYWELL	WIRING HARNESS ASSY
3888297-3	49-25-95	HONEYWELL	WIRING HARNESS ASSY
3888438-1	49-11-13	HONEYWELL	WIRING HARNESS ASSY
394408-8-1	73-10-17	ALLIED SIGNAL	FLOW DIVIDER VALVE
394408-9-1	73-10-17	ALLIED SIGNAL	FLOW DIVIDER VALVE
4100837G	49-53-02	PRATT & WHITNEY	BLEED CONTROL VALVE
4131020-1 4131020-2 4131020-3 4131020-4	49-90-57	HONEYWELL	LUBE MODULE
4132004-1 INSPECT ONLY	49-90-57	HONEYWELL	CAP VALVE

4132092-1 4132092-2 INSPECT ONLY	49-90-57	HONEYWELL	SCREEN
4132093-1 INSPECT ONLY	49-90-57	HONEYWELL	SHAFT OIL PUMP DRIVE
4132096-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132097-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132098-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132100-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132101-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132110-4 INSPECT ONLY	49-90-57	HONEYWELL	ROTOR
4132136-1 INSPECT ONLY	49-90-57	HONEYWELL	VALVE ASSY
4132151-3 INSPECT ONLY	49-90-57	HONEYWELL	HOUSING
4132152-3 INSPECT ONLY	49-90-57	HONEYWELL	SHAFT DRIVE
4132155-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132156-2	49-90-57	HONEYWELL	ROTOR RING
4132157-1 INSPECT ONLY	49-90-57	HONEYWELL	PLATE SEAL
4132159-2 INSPECT ONLY	49-90-57	AERO CONTROLEX	FILTER HOUSING
4132160-2 4132160-3 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132161-1 INSPECT ONLY	49-90-57	HONEYWELL	PLUG
4132164-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132165-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132166-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132166-2 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132167-1 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132168-1 4132168-3 INSPECT ONLY	49-90-57	HONEYWELL	PORTPLATE
4132169-1 4132169-2 INSPECT ONLY	49-90-57	HONEYWELL	PORT PLATE
4132202-3 4132202-4 INSPECT ONLY	49-90-57	HONEYWELL	FILTER HOUSING

4132218-1 4132218-3 INSPECT ONLY	49-90-57	HONEYWELL	PIN
4141028-1 4141028-2 4141028-3 4141028-4	49-90-55	HONEYWELL	DE PRIME VALVE
4300-7 TEST ONLY	29-00-02	FOKKER	SWITCH
43925	74-11-01	UNISON	EXCITER
4407017 TEST ONLY	49-91-49	AERO CONTROLEX	INDICATOR
4414020 INSPECT ONLY	49-91-49	HONEYWELL	FILTER HOUSING
441921-5	49-30-99	HONEYWELL	FUEL CONTROL
44760 TEST ONLY	74-10-44	UNISON	IGNITION EXCITER
4500039	49-32-04	P&WC	FUEL CONTROL ASSY
4501230A	APS3200 CIR	HAMILTON SUNDSTRAND	FUEL NOZZLE
4501259A	49-33-01	HAMILTON SUNDSTRAND	FLOW DIVIDER
4501259C	49-33-01	HAMILTON SUNDSTRAND	FLOW DIVIDER
4501788A INSPECT ONLY	APS3200 CIR	PRATT & WHITNEY	AIR DUCT ASSEMBLY
4502023 TEST/REPAIR	49-10-04	P&WC	ENGINE CONTROL HARNESS ASSY
4504086 TEST ONLY	49-23-05	P&W	ACTUATOR
4504400 TEST ONLY	APS3200 EM	P&WC	REAR BEARING HOUSING
4506061 TEST ONLY	49-10-06	APIC	WIRE HARNESS ASSY
4508693	49-70-05	HAMILTON SUNDSTRAND	IDENTIFICATION ASSEMBLY
4510835 TEST ONLY	49-23-05	P&WC	ACTUATOR
47649 1A7908	74-11-02	UNISON P&WC	IGNITION EXCITER
47649-1 1A7908	74-11-02	UNISON P&WC	IGNITION EXCITER
47649-2 1B7880	74-11-02	UNISON P&WC	IGNITION EXCITER
47649-3 1B7880	74-11-02	UNISON P&WC	IGNITION EXCITER
48378-2-4	49-20-14	HONEYWELL	ENGINE STARTER MOTOR
4900312 INSPECT ONLY	49-52-04	HAMILTON SUNDSTRAND	SEAL ASSEMBLY

4900314 INSPECT ONLY	49-52-04	HAMILTON SUNDSTRAND	BEARING
4950009 TEST ONLY	APS3200 EM	P&WC	SPEED SENSOR
4950014 TEST ONLY	APS3200 EM	P&WC	COMPRESSOR AIR TEMP SENSOR
4950036 TEST ONLY	APS3200 EM	P&WC	PRESSURE/ TEMP TRANSDUCER
4950488 TEST ONLY	APS3200 EM	P&WC	LOW OIL PRESSURE SWITCH
4950581-1 TEST ONLY	49-42-05	P&WC	IGNITION CABLE
4950581-2 TEST ONLY	49-42-05	P&WC	IGNITION CABLE
4950597-1 4950597-2	APS3200 EM	P&WC	THERMOCOUPLE
4951546 TEST ONLY	APS3200 EM	P&WC	COMPRESSOR DISCHARGE PRESSURE SENSOR
4951593 TEST ONLY	APS3200 CIR	P&WC	PRESSURE RELIEF VALVE
4951985 TEST ONLY	APS3200 EM	P&WC	LOW PRESSURE SWITCH
4951989 TEST/INSPECT ONLY	APS3200 CIR	P&WC	FLEXLINE, GEARBOX TO LOP SWITCH
4952164	49-41-07	UTC AEROSPACE	STARTER
49522 6895573 TEST ONLY	74-10-04	UNISON ROLLS-ROYCE	EXCITER
4952590 TEST ONLY	APS3200 EM	P&WC	SENSOR
4953795-1 TEST ONLY	APS3200 EM	P&WC	IGNITION CABLE
4953795-2 TEST ONLY	APS3200 EM	P&WC	IGNITION CABLE
4954220 TEST ONLY	APS3200 EM	P&WC	LOW OIL PRESURE SWITCH
49731	74-10-44	UNISON	IGNITION EXCITER
519852-X	49-44-02	HONEYWELL	ENGINE STARTER MOTOR
519858-8	49-41-22	HONEYWELL	ENGINE STARTER MOTOR
5908661 INSPECT ONLY	APS3200 CIR	P&WC	SCAVENGE PUMP ASSEMBLY
5908954 TEST ONLY	APS3200 EM	P&WC	SWITCH INDICATOR
5909073 TEST ONLY	APS3200 EM	P&WC	OIL TEMPERATURE SENSOR
5909849 TEST ONLY	APS3200 EM	P&WC	OIL LEVEL SENSOR
61163	28-20-18	EATON	FUEL SHUT OFF VALVE

6430589-1	24-21-14	HONEYWELL	PLATE SEAL
692545-1	49-30-67	HONEYWELL	SOLENOID SHUT OFF VALVE
692545-10	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-11	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-12	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-13	49-30-67	HONEYWELL	SOLENOID SHUT OFF VALVE
692545-17	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-18	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-2	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-3	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-400	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-500	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-6	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-7	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692545-9	49-30-67	HONEYWELL	SOLENOID SHUTOFF VALVE
692546-4 TEST ONLY	49-26-85	HONEYWELL	SOLENOID VALVE
715201-4	49-30-01	ARGO TECH	FUEL PUMP ASSY
75076-ALL	49-30-38	HONEYWELL	FUEL ATOMIZER ASSEMBLY
756671	APS3200 CIR	PRATT & WHITNEY	BEARING
756722 756722A 756722B	49-92-01	HAMILTON SUNDSTRAND	SOLENOID VALVE ASSEMBLY
76133 INSPECT ONLY	49-91-41	AERO CONTROLEX	FILTER HOUSING
7900013	38-30-08	ZODIAC	WASTE TANK ASSEMBLY
7900064	38-30-15	ZODIAC	VACUUM TOILET ASSEMBLY
7900071	38-30-08	ZODIAC	WASTE TANK ASSEMBLY
83311-49930 TEST ONLY	74-10-01	BF GOODRICH	EXCITER
856LU1 TEST ONLY	34-10-66	UTC AEROSPACE	PITOT TUBE

869169-1 TEST ONLY	72-IR-15	HONEYWELL	SENSOR, INLET TEMP/PRESSURE
869245-4	72-13-04	ALLIED SIGNAL	FEATHRING VALVE ASSY
884650-2 INSPECT ONLY	49-53-67	HONEYWELL	PLATE SEALING RING
8921082G1	38-10-01	BF GOODRICH	LAVATORY WATER HEATER
8921082G2	38-10-01	BF GOODRICH	LAVATORY WATER HEATER
8921082G5	38-10-01	BF GOODRICH	LAVATORY WATER HEATER
8921082G6	38-10-01	BF GOODRICH	LAVATORY WATER HEATER
897260-5 TEST ONLY	72-IR-10	HONEYWELL	PRESSURE RATION TRANSDUCER
897331-1 REPAIR ONLY	RS-101000	ALLIED SIGNAL	TRANSDUCER
897331-2 REPAIR ONLY	RS-101000	ALLIED SIGNAL	TRANSDUCER
897331-3 REPAIR ONLY	RS-101000	ALLIED SIGNAL	TRANSDUCER
897331-4 REPAIR ONLY	RS-101000	ALLIED SIGNAL	PRESSURE TRANSDUCER
897331-5 REPAIR ONLY	RS-101000	ALLIED SIGNAL	TRANSDUCER
899981-ALL	49-30-38	HONEYWELL	FUEL ATOMIZER ASSEMBLY
9040960-1 3876129-1	49-41-09	UNISON HONEYWELL	EXCITER
9043105-4 TEST ONLY	74-21-08	UNISON	IGNITION LEAD
9043185-16 9339M26P16	74-21-12	UNISON CFM INTERNATIONAL SA	IGNITION LEAD
9045000-1 804765	74-11-05	UNISON P&WC	EXCITER
9045330-2	74-11-38	UNISON	EXCITER
9048700-7 3876195-7	49-41-21	UNISON HONEYWELL	EXCITER
9048700-8 3876195-8	49-41-21	UNISON HONEYWELL	EXCITER
9048700-9 3876195-9	49-41-21	UNISON HONEYWELL	EXCITER
9048900-2 179420-2	49-42-01	UNISON HAMILTON SUNDSTRAND	IGNITION EXCITER
9049000-1 4950000	49-42-01	UNISON HAMILTON SUNDSTRAND	EXCITER
9049300-2 3888000-7	49-40-41	UNISON HONEYWELL	EXCITER

9049400-1 3039609	74-12-06	UNISON P&WC	IGNITION EXCITER
9049800-4 3041640-01 TEST ONLY	74-12-09	UNISON P&WC	IGNITION EXCITER
9049860-1 3876280-1	49-41-25	UNISON HONEYWELL	EXCITER
9049860-10 3876280-4	49-27-23	UNISON P&WC	EXCITER
979786-1 979786-2 979786-4 979786-5 979786-6 OVERHAUL	49-50-65	HONEYWELL	SHUT OFF VALVE
979806-12	49-53-67	HONEYWELL	SURGE CONTROL VALVE 4"
9910331-1 GULTON UNITS REPAIR ONLY	RS-101000	CESSNA	TRANSDUCER
9910331-2	RS-101000	CESSNA	TRANSDUCER
9910331-3 REPAIR ONLY	RS-101000	CESSNA	TRANSDUCER
9910331-4 REPAIR ONLY	RS-101000	CESSNA	TRANSDUCER
9910331-5 REPAIR ONLY	RS-101000	CESSNA	TRANSDUCER
A64847-006 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-007 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-1 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-2 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-3 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-4 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64847-5 TEST ONLY	49-50-03	MOOG	SERVO ACTUATOR ASSY
A64982-ALL TEST ONLY	49-50-04	MOOG	SERVO ACTUATOR ASSEMBLY
CGFT1100-01	26-11-21	SIEMENS	SMOKE DETECTOR
L963046 430107	74-11-02	UNISON ROLLS-ROYCE	EXCITER
S685-1-11	31-09-45	WESTON AEROSPACE	THERMOCOUPLE HARNESS
S685-2-13	31-09-45	WESTON AEROSPACE	THERMOCOUPLE HARNESS
TGLN-2127	L-1106	UNISON	EXCITER

WE3888439-1	49-41-09	HONEYWELL	EXCITER
-------------	----------	-----------	---------